



morphy richards®

**3 Year
Guarantee***

*Upon registering your product
at morphyrichards.co.uk

STEAM COMPACT 400W Travel Steam Iron



Model No.

304000

User Manual

Please read and keep these instructions for future use





HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

Please read these instructions carefully before using the product.

- This appliance can be used by children aged from 8 years and above by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazard involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the iron and cord out of the reach of children aged less than 8 years.
- The iron must not be left unattended while it is connected to the mains supply.





HEALTH AND SAFETY

- The plug must be removed from the socket before filling the iron with water.
- The iron must be used and rested on a flat stable surface.
- When placing the iron on its heel, ensure that the surface on which the heel is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage, or if it is leaking.
- For care and cleaning refer to the relevant section of this manual.
- The filling aperture must not be opened during use.
- **CAUTION – HOT: Burns can occur from touching hot parts, hot water or steam.**
- **WARNING: To avoid electric shock, do not immerse appliance in water / liquid.**





IMPORTANT

To reduce limescale damage we recommend using deionised, distilled or demineralised water, available at most large supermarkets. This is particularly important if you live in a hard water area.

Never use battery topping up fluid or water containing any substances like starch, sugar, fragrant additives or defrosted water from a refrigerator. Failure to maintain your iron will invalidate your guarantee.

IMPORTANT

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).
- Do not operate with a damaged supply cord or grommet. It must be replaced by the manufacturer, its service agent, or similarly qualified person in order to avoid a hazard.
- Do not let the mains lead come into contact with the hot soleplate of the iron.
- Should the fuse in the mains plug require changing, replace it with a fuse of the same rating as originally fitted.
- **WARNING: This appliance must be earthed.**

HEALTH AND SAFETY



CAUTION!
HOT
SURFACE!

TREATING SCALDS

- Run cold water over the affected area immediately.
- Do not stop to remove clothing.
- Get medical help quickly.





PRODUCT OVERVIEW



 
- | | |
|--------------------------------|------------------------------|
| 1. Soleplate | 5. Water Tank Release Button |
| 2. Steam Control Lever | 6. Voltage Selection Switch |
| 3. Temperature Indicator Light | 7. Heel |
| 4. Water Tank | |





USING THE IRON

1. FILLING THE TANK

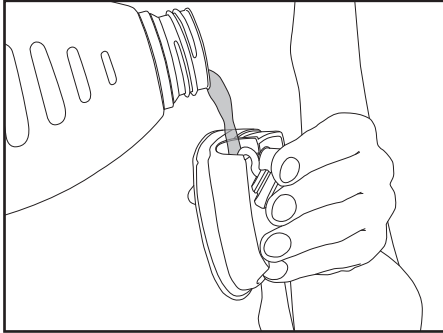

Before filling the iron with water, ensure the iron is unplugged and the steam control level (2) is set to off.

Remove the water tank from the iron by pressing the water tank release button (5).

Open the water tank bung and fill to the MAX line using the jug supplied.

 
Replace the bung and re-attach the water tank to the iron.

Do not overfill the iron otherwise it will cause leaking from around the filler cap and may run down the iron.

IN HARD WATER AREAS, WE RECOMMEND USING DEIONISED DISTILLED OR DEMINERALISED WATER.

Never use battery topping up fluid or water containing any substances like starch, sugar, fragrant additives or defrosted water from a refrigerator. NOTE: Please see point 2 of 'Exclusions' on page 11.

2. VOLTAGE SELECTION SWITCH

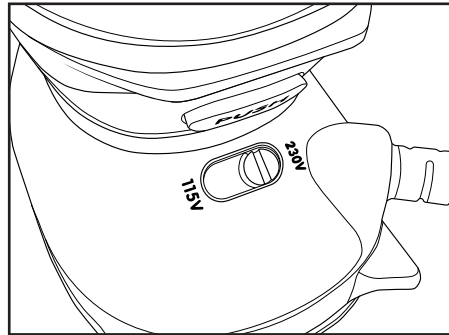

Using the voltage selection switch (6) make sure the product is set to the correct voltage for the local electricity supply.

 
WARNING: Using the wrong voltage setting may damage your iron and is not covered by the guarantee.





USING THE IRON


3. TEMPERATURE SELECTION

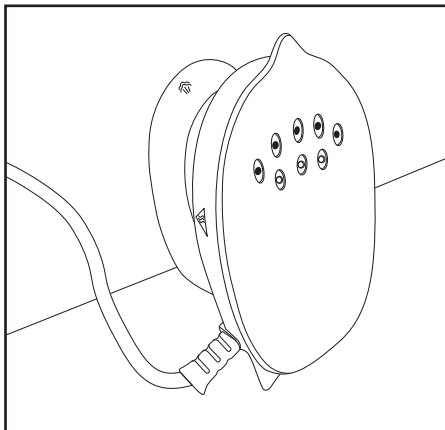

This iron has only one temperature setting and cannot be adjusted. Before ironing your clothing, we recommend passing the Travel Iron over the inner hem of a garment or similar area to test the temperature is suitable.

Stand the iron on the heel (7) and plug in, when the temperature indicator light (3) stops flashing the iron is ready to use.

 4. SELECTING THE STEAM LEVEL

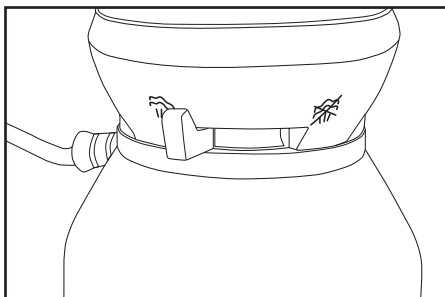


To dry iron, leave the steam control lever (2) in the off position or to steam iron slide the lever to the steam on position.





MAINTAINING THE IRON

 1. EMPTYING AND STORING

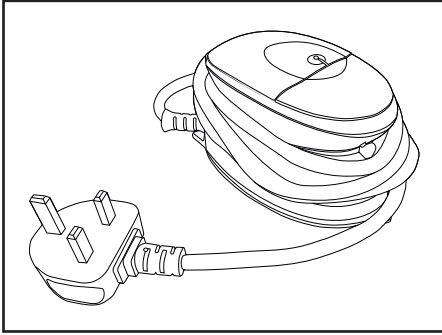

piece of cotton which will draw the deposit off the surface.

Do not use scouring powder or cleaning solution as this could cause damage to the coating.

To clean the exterior

Allow the iron to cool and wipe with a damp cloth, then dry.

When you have finished ironing, unplug your iron and set the steam control lever (2) to the 'off' position.

Remove the water tank and empty any remaining water.

Ensure the iron is cool and thoroughly dry before wrapping the cord around for storage.

IMPORTANT: The cable can be damaged if wound too tightly around the iron and will not be covered by the guarantee.

2. CLEANING THE SOLEPLATE

To clean the non-stick coated soleplate

In the unlikely event of any manmade fibres fusing to the soleplate, pass it over a clean





CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: hello@morphyrichards.co.uk

www.morphyrichards.co.uk





REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



To validate your 3 year guarantee, scan the QR code or register online at www.morphyrichards.co.uk

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year





REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.





PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.





RN304000MUK Rev1

morphy richards®



@morphyrichardsuk #loveyourmorphy

morphyrichards.co.uk

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

