



# morphy richards®

**3 Year  
Guarantee\***

\*Register your product at  
morphyrichards.co.uk

## 3-in-1 Electric Can Opener

Can Opener, Bottle Opener  
& Knife Sharpener



Model No.  
**432030**

## User Manual

Please read and keep these instructions for future use





## Health and Safety

Please read these instructions carefully before using the product.

- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
- Keep the appliance and its cord out of the reach of children aged less than 8 years.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- If the mains cable is damaged, it must be replaced by the manufacturer, it's service agent or a similarly qualified person in order to avoid a hazard.
- Avoid touching moving parts. Keep hands, hair and clothing away from the blade during operation, to prevent personal injury and/or damage to the appliance.
- Unplug from the outlet when not in use, or when left unattended, and before assembling, disassembling or cleaning.
- **WARNING:** The blades are very sharp. Handle with care when using and cleaning. For cleaning refer to page 08.



## Health and Safety

### Location

- Ensure the product is placed on a firm, flat surface.
- Do not use the appliance outdoors or near water.
- Do not place the appliance on or near hot surfaces such as a hot plate, radiant rings or near a naked flame.
- **WARNING:** Do not place the appliance onto a metal tray or surface whilst in use.

### Mains Cable

- Do not let the mains cable hang over the edge of the worktop where a child could reach it.
- Do not let the lead cable cross an open space e.g. between a low socket and a table.
- Do not let the cable run across a cooker or other hot area which may damage the cable.
- The mains cable should reach from the socket to the base unit without straining the connections.

### Personal Safety

- **WARNING:** To protect against the risk of electric shock, NEVER immerse the appliance in water or in any other liquid and always ensure the electrical connections are kept dry.

### Other Safety Considerations

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.
- Do not use the appliance for anything other than its intended purpose.

### Product Specific Safety

- **WARNING:** To protect against fire, electric shock and personal injury, do not immerse the cord, plug or appliance body in water or other liquid.
- Make sure the can opener is not loaded before connecting or disconnecting the mains supply and when left unattended.


### Electrical Requirements

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be AC (alternating current).
- Should the fuse in the mains plug require changing, replace it with a fuse of the same rating as originally fitted.



## Product Overview

1. Magnetic Lid Holder and Guide Pin
2. Cutting Lever
3. Cutting Blade
4. Geared Wheel
5. Metal Bottle Cap Opener
6. Knife Blade Sharpener
7. Power Cord and Cord Storage

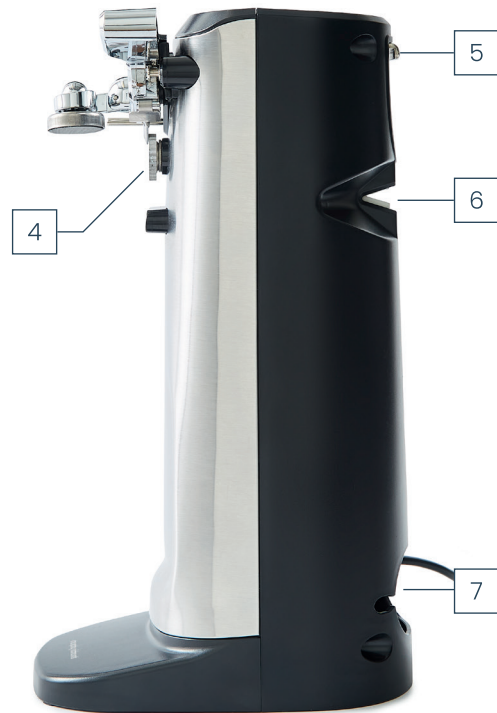



## Using your Can Opener

Remove the Can Opener Unit and Cutting Lever from the packaging.

1. To attach the Cutting Lever to the can opener, align the key tabs with the key slots, and push it into the Can Opener unit, then press down to secure.
2. Plug the Can Opener into a mains outlet.
3. Raise the Cutting Lever (Fig. 1) and move the can into place so that its rim is below the Guide Pin and on top of the Geared Wheel.



Fig. 1

4. Lower the Cutting Lever into a horizontal position, the Magnetic Lid Holder will attach to the lid can.

Make sure the blade is inside the rim of the can (Fig. 2), and the can opener will start automatically.

It is not necessary to hold the Cutting Lever down or hold the can while it is being opened. The motor will automatically stop when the can is open.



Fig. 2

5. When the can has stopped moving, hold the opened can and lift the cutting lever to release the can.

**CAUTION:**

**Avoid touching the cut edges of the can or lid as they are sharp, carefully remove the lid from the magnet.**





## User Manual

### Important Notes

- The Can Opener should not be used to open cans with a pull tab, peel-off foil seal, rolling key cans, rimless cans, or cans with angled corners. Cans should not be wider than 10cm and/or taller than 17.5cm. If a can weighs more than 500g place your hand on top of the Can Opener to avoid overturning.
- If there is a bump, dent, or heavy seam in the rim of the can, open the other end of the can or start the cutter just beyond it.
- Clean and dry the blade after every use, taking care of the sharp blade.
- The Can Opener motor is permanently lubricated and will require no oiling.
- Do not place the appliance on a polished wooden surface as damage may occur to the surface.

**WARNING:**

**The can opener contains a sharp blade. Use care when holding or handling the product.**

**ELECTRICAL SHOCK HAZARD:**

**Do not immerse the body or power cord in water or any other liquid.**



## Using your Bottle Opener

The Can Opener **SHOULD NOT** be plugged into a mains outlet when opening bottles.

1. Holding the bottle, position the cap under the metal hook in the Metal Cap Bottle Opener (Fig. 3).
2. Place one hand on top of the Can Opener to avoid overturning and pull the bottle downwards with the other to pop the cap off.



Fig. 3

## Using your Knife Sharpener

The Can Opener **SHOULD NOT** be plugged into a mains outlet when sharpening knives.

1. Place the knife intended for sharpening in the Knife Blade Sharpener slot at the back of the unit (Fig 4).
2. To sharpen the entire length of the blade carefully pull the knife backwards through the Knife Blade Sharpener and repeat until the knife has reached the required sharpness.
3. After sharpening, wash and dry the knife.



Fig. 4

### Important Notes

- Clean and dry knives before sharpening.
- Do not attempt to sharpen serrated blades, as this will smooth their edges.
- Do not attempt to sharpen scissors.
- Always sharpen knives with care to avoid injury.





## Care & Cleaning

Before cleaning the Can Opener, unplug from the mains outlet.

1. To remove the Cutting Lever and Magnetic Lid Holder for easy cleaning, raise the Cutting Lever and pull out of the Can Opener.
2. The Cutting Lever/Magnetic Lid Holder can be cleaned with a damp cloth and then dried thoroughly.
3. Wipe the Can Opener unit and the area around the Geared Wheel with a damp cloth or sponge.
4. To replace the Cutting Lever, align the key tabs with the key slots, and push it into the Can Opener unit then press down the Cutting Lever to secure.
5. The Power Cord can be stored in the Cord Storage at the back of the Can Opener.

### Important Note

- To avoid damaging your can opener, do not use abrasive cleaners or scouring pads.

## Contact Us

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

**email: [hello@morphyrichards.co.uk](mailto:hello@morphyrichards.co.uk)**

**[www.morphyrichards.co.uk](http://www.morphyrichards.co.uk)**







## Troubleshooting

Problem	Solution
Can Opener does not work.	Check that the appliance is plugged in.
	Check the fuse.
	Check that the cutting lever is fitted correctly.
	Check that the cutting lever has been pushed down fully and the cutting blade has pierced the can.
Can will not open.	Try repositioning the cutting blade.
	Check for bumps, dents, or a thick seam in the rim of the can and open at the other end or start the cutter just beyond it.
Can is not rotating.	The can opener is suitable for round steel cans with straight sides and rolled edges.
	If there is a recess in the lid of the can, the geared wheel cannot engage.
	Aluminium cans will not attach to the magnetic lid holder.
The knife sharpener does not work.	Serrated knives are not suitable for sharpening.
	In order to sharpen the knife sufficiently, the sharpening action needs to be repeated several times.
The bottle opener does not work.	Not to be used with screw-off caps or pull ring bottles.



## Guarantee

# Registering Your 3 Year Guarantee

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



**To validate your 3 year guarantee,  
scan the QR code or register online  
at [www.morphyrichards.co.uk](http://www.morphyrichards.co.uk)**

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

### Your 2 Year Guarantee

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

#### Model no.

#### Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 12 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year guarantee period, the guarantee on the new item will be calculated from the original





## Guarantee

purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 1 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

### Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

### Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

### Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK





# morphy richards®



@morphyrichardsuk #loveyourmorphy

[morphyrichards.co.uk](http://morphyrichards.co.uk)



## Tag to Win

in our Monthly Competition!\*

Simply snap a photo of your Morphy treasures and share on Instagram or TikTok, tagging us @morphyrichardsuk and using the hashtag #loveyourmorphy

\*See [morphyrichards.co.uk](http://morphyrichards.co.uk) for full terms and conditions

smart ideas for your home

